

## Factory Default



### USB HID



### Keyboard PS2



### USB COM



### RS232



## Country Nordic

Enter configuration

1



Country

2



 
1

3



2

4



Exit configuration

5



## Suffix selection



Enter configuration



Suffix



None



Return



TAB



Exit configuration